

Native Pens

Sierra Click Pen Instructions

Required:

1/4" Mandrel


Ø27/64" Drill Bit

Pen Mill

Sierra Pen Bushings

Turning the Pen Barrel.


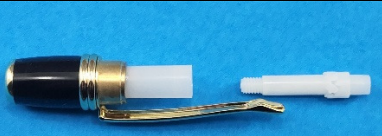

1. Cut a pen blank slightly longer than the brass tube. Recommended blank size is 20mm x 20mm x 60mm.
2. Drill the blank through the centre, lengthwise, with a 27/64" bit.
3. Sand the surface of the brass tube. This can be done by hand or mounted in the bushes on the lathe. This will clean off any oxidation and roughen the surface for a better glue bond.
4. Bond the tube into the timber blank. This can be done with CA or two-part epoxy glue. Insert the tube with a twisting motion then push it in until slightly under flush. About equal distance in from each end of the timber blank.
5. Allow glue to cure as required by glue manufacturer.
6. Clean all the dried glue from inside the brass tube. This can be done with a appropriate size drill bit by hand. Not cleaning out all the glue from the tube is the most common cause of pen failure.
7. Using a barrel trimmer, face off the ends of the blanks until you can just see the bright brass end of the tube. STOP facing at this point. Another method to square the ends is sanding on a disc sander against a square fence or using a jig to hold the tube square to the disc.
8. Another method of squaring the ends of the blank is to turn the blank until it is just round. Then using a mitre gauge to maintain the blank perpendicular to the sanding disc, just touch the ends to the disc. Once the blank is square and you can see the ends of the tube brighten you can return the blank to the mandrel and finish the turning until the desired shape is reached.
9. Finish the pen to your specifications. Remove the barrel from the mandrel and it is ready for assembly.

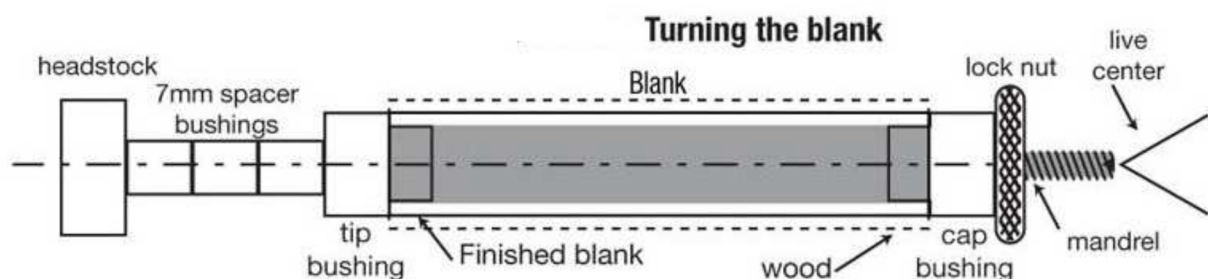


Native Pens

Sierra Click Pen Instructions

Assembly of the pen.

Align click mechanism parts as shown.	Click right two parts together.	Insert into Top Cap of pen kit.
		

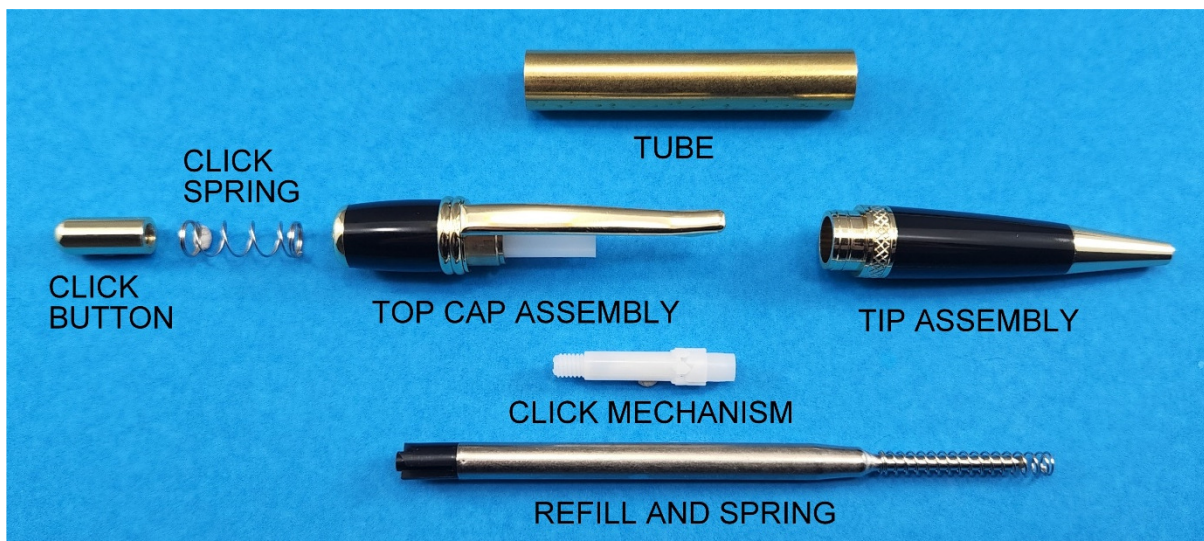

1. Press the Top Cap / Clip Assembly with Click Mechanism into one end of the finished barrel.
2. Insert the Refill with Spring into the pen Barrel, black refill end first.
3. Slide the Tip Assembly over the refill and press into the pen Barrel.
4. Insert the Click Spring into the open end of the Top Cap Assembly.
5. Insert the Click Button and screw onto the Click Mechanism.
6. Your pen is finished.

To change the refill, unscrew the front section of the Tip Assembly.